

## Installing additional universal catch for 21" 10-SI Blanking Panel

1

### **Preparation:**

- » Size 3 Flat Head Screwdriver
- » Replacement universal catch




4

### **Aligning**

### **universal catch:**

Align the universal catch to match the keyhole for insertion.

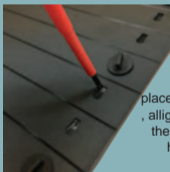

2

### **Aligning driver head:**

To enable clean knock out, place the panel on a flat work bench, align the flat driver head alongside the edge of the recessed area and hold firmly onto the screwdriver.

5

### **Inserting and securing universal catch:**

Insert the universal catch into the keyhole and push down until the catch is secured onto the panel.



3

### **Breaking out the keyhole knockout:**

Once aligned, press down firmly break out the keyhole knockout. Move along the edges and repeat until the knockout is removed cleanly.



6

### **Completing installation:**

After the universal catch is installed in place, it should be able to turn freely and remain secured to the panel.

